


INSTALLATION INSTRUCTIONS OF SOLID PARQUET PLANKS AND DECORATIVE PATTERN PANELS. Page 3.

TECHNICAL SPECIFICATIONS

Dated 05/2021

5

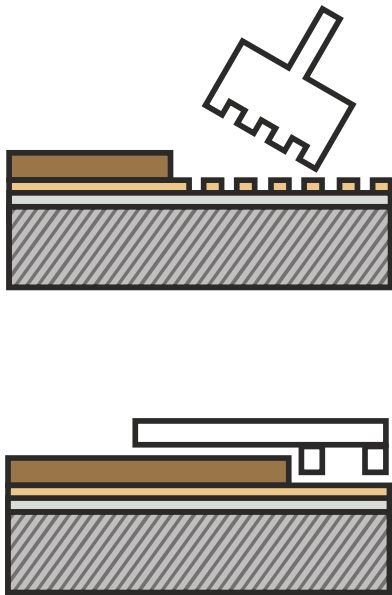

Glue down Installation of planks and decorative pattern panels.

For the glue down Installation of planks and decorative pattern panels and Herringbone, Chevron, Hungarian Point a two-component polyurethane glue should be used (glue is applied to the base with a toothed spatula). First, you need to collect the first 2-3 rows of planks/pattern panels, glue them and give enough time to polymerize the glue, then continue laying the next rows. When installing the parquet planks and pattern panels, it is recommended to use special tie straps. For the most reliable bond of the adhesive to the subfloor weight should be applied. Parquet pattern panels, and also Herringbone, Chevron, Hungarian point which have a groove all around their perimeter when glued down are held in place with pieces of spline inserted in the grooves.

Applying glue in the grooves before inserting the pieces of spline is not required, but is allowed. A gap of 15mm (1/2") should be left open when installing flooring next to the walls around the perimeter of the room. To ensure a tight fit during installation it is necessary to brace planks in the cross and longitudinal directions using wedges around the perimeter and or belts from side to side. (this requirement does not apply when installation is in a dry environment with humidity of air of 40% or less. In this case planks are installed, leaving longitudinal gaps of 0,2 mm(.007") for the subsequent seasonal expansion). Installation of the next row should begin with a plank that is at least 15 cm (6") longer or shorter than the next. This operation is repeated with the rest of the planks. When laying the floor in a room wider than 15 m (50'), it is recommended to use spacers or make expansion joints. Boards of the last row cut off on width, leaving a expansion gap of 15 mm (1/2") from a wall. Between the plank and doorways, thresholds, columns, coverings from other materials it is necessary to leave compensatory seams of 6-9 mm (1/4") which are then filled with cork expansion strips.

6

Cutting and fastening of skirting boards.

The skirting board is attached only to the wall and not to the parquet plank. Fastening of a skirting board is typically done with glue and small finishing nails.

